

Operating manual

Battery-powered rescue device

E-FORCE3



SPS 270 MK2 E-FORCE3, SPS 360 MK2 E-FORCE3, SPS 370 MK2 E-FORCE3,
RIT-TOOL E-FORCE3, RSX 160 E-FORCE3, RSU 180 PLUS E-FORCE3, RSX 185 E-FORCE3,
RSU 210 PLUS E-FORCE3, SP 40 C E-FORCE3, SP 44 AS E-FORCE3, SP 54 AS E-FORCE3
SP 50 BS E-FORCE23 RZ 1-910 E-FORCE2, RZT 2-1170 E-FORCE2, RZT 2-1360 E-FORCE2,
RZT 2-1500 E-FORCE2



tested in accordance with
EN 13204
NFPA 1936

1097468

WEBERRESCUE
SYSTEMS

www.weber-rescue.com

Table of Contents

| | | |
|----------|---|-----------|
| 1 | General information | 4 |
| 1.1 | About the operating manual | 4 |
| 1.2 | Explanation of symbols | 5 |
| 1.3 | Limitations of liability | 6 |
| 1.4 | Copyright | 6 |
| 1.5 | Warranty conditions | 7 |
| 1.6 | Customer service | 7 |
| 2 | Safety | 8 |
| 2.1 | Intended use | 8 |
| 2.2 | Responsibility of the customer | 10 |
| 2.3 | Operating personnel | 11 |
| 2.4 | Personal protective equipment | 12 |
| 2.5 | Specific hazards | 13 |
| 2.6 | How to respond in the event of danger or accidents | 15 |
| 2.7 | Signage | 16 |
| 3 | Technical data | 17 |
| 3.1 | Combi tools | 17 |
| 3.2 | Cutters | 18 |
| 3.3 | Spreader | 19 |
| 3.4 | Rescue ram | 20 |
| 3.5 | Operating conditions | 20 |
| 3.6 | Type plate | 20 |
| 4 | Design and function | 21 |
| 4.1 | Overview of E-FORCE devices | 21 |
| 4.2 | Hydraulic supply | 25 |
| 4.3 | Electrical supply, using a combi device as an example | 26 |
| 4.4 | Operating E-FORCE devices | 27 |
| 4.5 | Accessories | 28 |
| 4.6 | Replacing blade inserts (PLUS) | 31 |
| 4.7 | Changing the spreader tips (spreaders, combi tools) | 33 |

| | | |
|-----------|---|-----------|
| 5 | Possible applications | 34 |
| 5.1 | Safety information | 34 |
| 5.2 | Cutting (cutters, combi devices) | 34 |
| 5.3 | Lifting / pressing (rescue cylinder) | 35 |
| 5.4 | Spreading (spreaders, combi devices) | 36 |
| 5.5 | Pulling (spreaders, combi devices) | 37 |
| 5.6 | Crushing (spreaders, combi devices) | 38 |
| 5.7 | Lifting (spreaders, combi devices) | 39 |
| 5.8 | Peeling (spreaders, combi devices) | 39 |
| 6 | Battery and charger | 40 |
| 6.1 | Charger technical data | 40 |
| 6.2 | Special safety instructions | 40 |
| 6.3 | Intended use | 42 |
| 6.4 | Power line connection | 42 |
| 6.5 | Li-ion battery | 42 |
| 6.6 | Charging process | 43 |
| 6.7 | Maintenance | 44 |
| 6.8 | Charging cycles | 44 |
| 7 | Transport, packaging and storage | 45 |
| 7.1 | Safety information | 45 |
| 7.2 | Transport inspection | 45 |
| 7.3 | Symbols on the packaging | 46 |
| 7.4 | Disposal of packaging | 46 |
| 7.5 | Storage | 46 |
| 8 | Installation and commissioning | 47 |
| 8.1 | Safety information | 47 |
| 8.2 | Checking | 47 |
| 8.3 | Shut-down (end of work) | 48 |
| 9 | Service | 49 |
| 9.1 | Safety information | 49 |
| 9.2 | Care and maintenance | 49 |
| 9.3 | Maintenance schedule | 50 |
| 10 | Malfunctions | 51 |
| 11 | Decommissioning/Recycling | 53 |
| 12 | EC Declaration of Conformity | 54 |

1 General information

1.1 About the operating manual

This operating manual provides important information on using E-FORCE devices. Proper compliance with all specified safety instructions and guidelines is a prerequisite for safe work.

Furthermore, adhere to the local accident prevention guidelines and general safety regulations for the region in which the devices are used.

These operating instructions must be carefully read prior to starting any work! They are an inherent part of the product and must be kept in a place that is known and accessible to personnel at all times.

This documentation contains information for operating your equipment. However, you may also find information which may not directly apply to your specific equipment.

All information, technical data, graphics and diagrams contained in these operating instructions are based on the latest data available at the time of the document's creation.

We recommend that, in addition to carefully reading through the operating manual, you be trained on handling the rescue equipment (possible applications, application tactics, etc.) by our qualified trainers.

1.2 Explanation of symbols

Warnings

Warnings are marked by symbols in this operating manual.

The individual instructions are introduced by signal words that express the severity of the hazard.

It is essential to comply with the instructions in order to prevent accidents, injuries and damage to property.



DANGER!

... indicates an imminently dangerous situation that can result in death or serious injury if not avoided.



WARNING!

... indicates a potentially dangerous situation that can result in death or serious injury if not avoided.



CAUTION!

... indicates a potentially dangerous situation that can result in minor or light injuries if not avoided.



ATTENTION!

... indicates a potentially dangerous situation that can result in material damage if not avoided.

Tips and recommendations



NOTE!

... highlights useful tips and recommendations, as well as information for efficient, trouble-free operation.

1.3 Limitations of liability

All information and instructions in this operating manual have been compiled in keeping with applicable standards and guidelines, the current state of technology, and our many years of knowledge and experience.

The manufacturer assumes no liability for damage due to:

- Failure to comply with the operating manual
- Unintended use
- Assignment of untrained personnel
- Unauthorised modifications
- Technical changes
- Use of non-approved replacement parts
- Use of non-original replacement parts

The actual scope of delivery can vary from the explanations and graphic representations provided in this manual in the case of special versions, or due to technical changes.

1.4 Copyright

All texts, diagrams, drawings and images in this operating manual may be used without restriction and without any prior approval.

**NOTE!**

Further information, images and drawings can be found on our website www.weber-rescue.com

1.5 Warranty conditions

The warranty conditions can be found as a separate document in the sales documentation.

1.6 Customer service

Our customer service is available to you for technical information.

Germany

Name: Mr Bernd Dürr
 Telephone: + 49 (0) 7135 / 71-10530
 Fax: + 49 (0) 7135 / 71-10396
 E-mail: bernd.duerr@weber-rescue.com

Austria

Name: Mr Matthias Schmid
 Telephone: + 43 (0) 7255 / 6237-12473
 Fax: + 43 (0) 7255 / 6237-12461
 E-mail: matthias.schmid@weber-rescue.com

**NOTE!**

When contacting our customer service department please state your equipment's designation, type and production year.
 These details can be found on the equipment type plate.

2 Safety

This section of the operating manual provides a comprehensive overview of all important safety aspects for optimal protecting operating personnel and for safe, trouble-free operation.

Significant hazards may occur if the handling and safety instructions in this manual are not complied with.

2.1 Intended use

The hydraulic battery-powered devices are designed and tested exclusively for the intended applications described here. All other activities are strictly forbidden.

All battery-powered devices are designed as one-man devices and are therefore to be operated by only one person.

Cutters (RSX 160 E-FORCE3, RSU 180 PLUS E-FORCE3, RSX 185 E-FORCE3, RSU 210 PLUS E-FORCE3)

- The battery-powered cutting devices are used exclusively for cutting doors and roof beams, pillars and door sills, the ring and the spokes of the steering wheel.
- If possible, for cutting solid material, always position the material at the base of the cutter blades closest to the pivot point, as it is equipped with special edges for cutting round material.
- In industrial application, the devices can also be used to cut pipes, structural steels, profiles, sheets and cables.

Spreader (SP 40 C E-FORCE3, SP 44 AS E-FORCE3, SP 54 AS E-FORCE3, SP 50 BS E-FORCE3)

- The battery-powered spreading devices can be used for opening doors, lifting vehicles or other moveable loads, pushing away and moving vehicle parts and loads, and crushing pipes and tie bars.
- If possible, always use the tips of the spreader for crushing.
- The tips of the spreader can also be used as a peeling tool.
- The chain set is solely to be used for pulling.

Combi devices (SPS 270 MK2 E-FORCE3, SPS 360 MK2 E-FORCE3, SPS 370 MK2 E-FORCE3, RIT-TOOL E-FORCE3)

- The combi devices can be used for both the applications indicated for the cutters and those for the spreader. The tips of the spreader can also be used as a peeling tool.

Rescue cylinder (RZ 1-910 E-FORCE2, RZT 2-1170 E-FORCE2, RZT 2-1360 E-FORCE2, RZT 2-1500 E-FORCE2)

- These devices are exclusively for pushing up steering columns, vehicle roofs and other obstacles and for pushing away vehicle body parts.
- They can also be used for supporting and bracing loads.



WARNING!
Improper use can be dangerous!

Any improper or unintended use of the devices can be hazardous!

Therefore, make absolutely sure that:

- » The devices are used only for the applications stated above.
- » All other information on proper use of the devices in Chapter 5 (Possible applications) is observed.

2.2 Responsibility of the customer

In addition to the health and safety instructions in this operating manual, one must adhere to the safety, accident prevention, and environmental protection guidelines for the region in which the equipment is used. Particularly applicable in this regard:

- The customer must be familiar with the applicable health and safety provisions and in a hazard analysis identify other hazards that may exist at the equipment's installation site due to the special working conditions.
- The customer must clearly regulate and specify responsibilities for installation, operation, maintenance and cleaning.
- The customer must ensure that all personnel who handle the equipment have fully read and understood the operating manual.
- In addition, at regular intervals, the operator must train personnel and inform them of the hazards of working with the equipment.

Moreover, the customer is responsible for ensuring that the equipment is always in technically faultless condition. Consequently, the following applies:

- After each use, and at least once a year, a visual inspection of the equipment must be carried out by a trained individual (according to DGUV Grundsatz 305-002 or country-specific guidelines).
- Every three years, or if you have doubts about the safety or reliability of the equipment, functional testing and stress testing must be carried out (according to DGUV Grundsatz 305-002 or country-specific guidelines).

2.3 Operating personnel

The following qualifications are cited in the operating instructions for the various activity areas:

- **Trained individual**
is informed through training offered by the customer about the tasks assigned to him and the possible dangers of improper conduct.
- **Specialist**
is someone who, due to specialised training, skills and experience, as well as knowledge of the applicable stipulations by the manufacturer, is capable of executing the tasks assigned to him or her and of independently recognising possible hazards.



WARNING!

Inadequate training can result in injuries!

Improper handling of the equipment can lead to serious injury or material damage.

Therefore, make absolutely sure to:

- » allow particular tasks to be carried out only by the persons stated in the relevant chapter of this manual.
- » When in doubt, call in specialists immediately.



NOTE!

The equipment may not be used by personnel who have consumed alcohol, medication or drugs!

2.4 Personal protective equipment

Wearing personal protective equipment (PPE) is essential to minimise the risks to operating personnel when working with the hydraulic rescue devices.

It is essential to wear the following protective clothing for all work:



Protective work clothing

Tight-fitting work clothing with tight sleeves and no protruding parts must be worn when working. It mostly serves to protect against entanglement by moving equipment parts.



Safety shoes

Steel-toed safety shoes must always be worn as protection against heavy falling parts and from slipping on slick surfaces.



Work gloves

Work gloves must be worn when working with the equipment to provide protection from sharp edges and shards of glass.



Helmet with face shield

A helmet with face shield must be worn for protection against flying or falling parts and shards of glass.



Protective goggles

Protective goggles must also be worn in addition to the face shield in order to protect the eyes from flying objects.

The following must also be worn for certain work:



Ear protectors

In addition to the basic protective equipment, ear protectors must also be worn to protect your hearing.

2.5 Specific hazards

The hazards arising from the risk analysis are listed in the following section.

Follow the safety instructions listed here and the warnings in the other sections of this manual to minimise potential health hazards and avoid dangerous situations.

Electricity



DANGER!

Danger of fatal electric shock!

There is an imminent life-threatening danger if live parts are touched. Damage to insulation or to specific components can pose a fatal hazard.

Therefore:

- » If the insulation is damaged, immediately disconnect the power supply and arrange for repairs.
- » Allow only qualified electricians to work on the electrical equipment.
- » For all work on the electrical equipment, it must be disconnected from the power source, and it must be checked that the device is de-energised.
- » Prior to maintenance, cleaning and repair work, the power supply must be switched off and secured to prevent it from being switched back on again.
- » Do not bypass or disable fuses.
When changing the fuses, ensure that they have the correct amperage.
- » Keep moisture away from live parts.
This can lead to a short-circuit.

Noise



WARNING! **Noise can damage hearing!**

The noise occurring in the work area can cause severe hearing damage.

Therefore:

- » You should also wear ear protectors when carrying out certain noise-producing tasks.
- » Do not stay in the hazardous area longer than necessary.

Hydraulic power



WARNING! **Hydraulic power hazard!**

Serious injury can result due to the released hydraulic forces and escaping hydraulic oil.

Therefore:

- » Constantly monitor the device during the work procedure and set down if necessary.
- » Inspect the hose lines and devices for damage after every use.
- » Avoid skin contact with the hydraulic oil (wear protective gloves).
- » Immediately remove the hydraulic oil from wounds and consult a doctor.

2.6 How to respond in the event of danger or accidents

Preventive measures

- Always be prepared for accidents
- Keep first aid equipment (first aid kit, blankets, etc.) at hand
- Familiarise personnel with accident alarms, first aid gear, and emergency equipment
- Keep entryways clear for emergency vehicles

In the event of an accident

- Shut down equipment immediately
- Initiate first aid measures
- Get people out of the danger zone
- Inform the responsible parties at the site of the incident
- Notify a doctor and/or the fire brigade
- Clear entryways for emergency vehicles

2.7 Signage

The equipment bears the following symbols and instructional signs. They refer to the immediate vicinity in which they are affixed.



Comply with the operating manual

Do not use the marked equipment until you have read the operating manual.



Hand injury warning

When working with the equipment, take care to avoid hand injuries through trapping or sharp edges.



WARNING!

Danger of injury due to illegible symbols!

Over time, stickers and symbols on the equipment can become soiled or otherwise illegible.

Therefore, make absolutely sure to:

- » Keep all safety, warning and operating information on the device easily legible.
- » Replace damaged signs and stickers immediately.

3 Technical data

3.1 Combi tools



SPS 270 MK2 E-FORCE3



SPS 360 MK2 E-FORCE3



SPS 370 MK2 E-FORCE3



RIT-TOOL E-FORCE3

| | SPS 270 MK2 E-FORCE3 | SPS 360 MK2 E-FORCE3 | SPS 370 MK2 E-FORCE3 | RIT-TOOL E-FORCE3 |
|--|----------------------------------|----------------------------------|----------------------------------|-------------------------------|
| Length | 811 mm | 927 mm | 933 mm | 773 mm |
| Width | 192 mm | 236 mm | 236 mm | 192 mm |
| Height | 241 mm | 241 mm | 241 mm | 241 mm |
| Weight | 13,6 kg | 18,8 kg | 20,0 kg | 13,3 kg |
| Opening width | 270 mm | 360 mm | 370 mm | 215 mm |
| Pulling width (with adapter) | 395 mm | 440 mm | 405 mm | 320 mm |
| Spreading force in working range* | 31 - 591 kN | 36 - 783 kN | 35 - 783 kN | 30 - 1.305 kN |
| Max. pulling force | 36,0 kN | 53,0 kN | 57,0 kN | 47,0 kN |
| Nominal pressure | 700 bar | 700 bar | 700 bar | 700 bar |
| EN class** | BK31/270G-13,6 1H-2G-3G-4H-5G | CK36/360H-18,8 1I-2J-3H-4K-5I | CK35/370H-20,0 1I-2J-3H-4J-5I | AC140H-13,3 1H-2H-3H-4H-5H |
| NFPA class | A6-B7-C6-D7-E7 | A7-B8-C6-D8-E8 | A7-B8-C6-D8-E8 | A6-B7-C6-D7-E7 |
| ID No. | 1093515 | 1096647 | 1096649 | 1093377 |

* per EN 13204 ** according to EN 13204

3.2 Cutters



RSX 160 E-FORCE3



RSU 180 PLUS E-FORCE3



RSX 185 E-FORCE3



RSU 210 PLUS E-FORCE3

| | RSX 160 E-FORCE3 | RSU 180 PLUS E-FORCE3 | RSU 210 PLUS E-FORCE3 | RSX 185 E-FORCE3 |
|------------------|-------------------------------|-------------------------------|-------------------------------|-------------------------------|
| Length | 879 mm | 898 mm | 994 mm | 1.029 mm |
| Width | 236 mm | 236 mm | 260 mm | 298 mm |
| Hight | 241 mm | 241 mm | 241 mm | 241 mm |
| Weight | 18,5 kg | 20,6 kg | 23,5 kg | 26,3 kg |
| Opening width | 160 mm | 185 mm | 210 mm | 260 mm |
| Nominal pressure | 700 bar | 700 bar | 700 bar | 700 bar |
| EN class* | BC160H-18,5 1I-2K-3H-4J-5H | BC185J-20,6 1J-2K-3K-4K-5K | CC200K-23,5 1K-2K-3K-4K-5K | CC240K-26,3 1K-2K-3K-4K-5K |
| NFPA class | A7-B8-C6-D7-E8 | A8-B9-C7-D9-E9 | A8-B9-C8-D9-E9 | A9-B9-C9-D9-E9 |
| ID No. | 1093508 | 1093512 | 1093514 | 1093510 |

* according to EN 13204

3.3 Spreader



**SP 40 C E-FORCE3 /
SP 44 AS E-FORCE3**



SP 54 AS E-FORCE3



SP 54 AS E-FORCE3

| | SP 40 C E-FORCE3 | SP 44 AS E-FORCE3 | SP 54 AS E-FORCE3 | SP 50 BS E-FORCE3 |
|--|-----------------------------|------------------------------|------------------------------|------------------------------|
| Length | 812 mm | 877 mm | 982 mm | 1.015 mm |
| Width | 233 mm | 239 mm | 282 mm | 282 mm |
| Height | 241 mm | 241 mm | 241 mm | 241 mm |
| Weight | 14,7 kg | 17,3 kg | 20,7 kg | 20,9 kg |
| Spreading distance | 515 mm | 610 mm | 735 mm | 805 mm |
| Pulling path | 550 mm | 465 mm | 620 mm | 680 mm |
| Spreading force in working range* | 41 - 173 kN | 44 - 857 kN | 55 - 501 kN | 50 - 501 kN |
| Max. pulling force | 47,0 kN | 68,0 kN | 70,0 kN | 67,0 kN |
| Max. crushing force* | 54,0 kN | 149,0 kN | 144,0 kN | 144,0 kN |
| Nominal pressure | 700 bar | 700 bar | 700 bar | 700 bar |
| EN class** | - | A544/610-17,3 | A555/735-20,7 | B550/805-20,9 |
| ID No. | 1093832 | 1093703 | 1091736 | 1091735 |

* per EN 13204 ** according to EN 13204

3.4 Rescue ram



**RZ 1-910
E-FORCE2**

**RZT 2-1360 E-FORCE2 /
RZT 2-1170 E-FORCE2**

**RZT 2-1500
E-FORCE2**

| | RZ 1-910 E-FORCE2 | RZT 2-1170 E-FORCE2 | RZT 2-1360 E-FORCE2 | RZT 2-1500 E-FORCE2 |
|------------------|----------------------|---------------------------|---------------------------|---------------------------|
| Length | 540 mm | 540 mm | 586 mm | 700 mm |
| Width | 134 mm | 134 mm | 134 mm | 134 mm |
| Height | 325 mm | 349 mm | 349 mm | 349 mm |
| Weight | 15,7 kg | 20,4 kg | 20,1 kg | 21,4 kg |
| Pressing force* | 111,3 kN | 189,4 kN / 99,0 kN | 108,0 kN / 62,0 kN | 108,0 kN / 62,0 kN |
| Starting length | 540 mm | 540 mm | 586 mm | 700 mm |
| End length | 908 mm | 1170 mm | 1386 mm | 1500 mm |
| Nominal pressure | 550 bar | 700 bar | 550 bar | 550 bar |
| EN class** | R111/368-15,7-E-I | TR189/360-99/270-20,4-E-I | TR108/428-62/372-20,1-E-I | TR108/428-62/372-21,4-E-I |
| ID No. | 1075272 | 1088997 | 1078342 | 1081519 |

* per EN 13204 ** according to EN 13204


3.5 Operating conditions

The permissible temperature range of the E-FORCE devices is between -20°C and +55°C. Reliable operation cannot be guaranteed outside of this range.

3.6 Type plate

On all E-FORCE devices, the type plate is located on the bottom of the drive unit. It shows the serial number, production date, nominal pressure and device designation.

Cutters

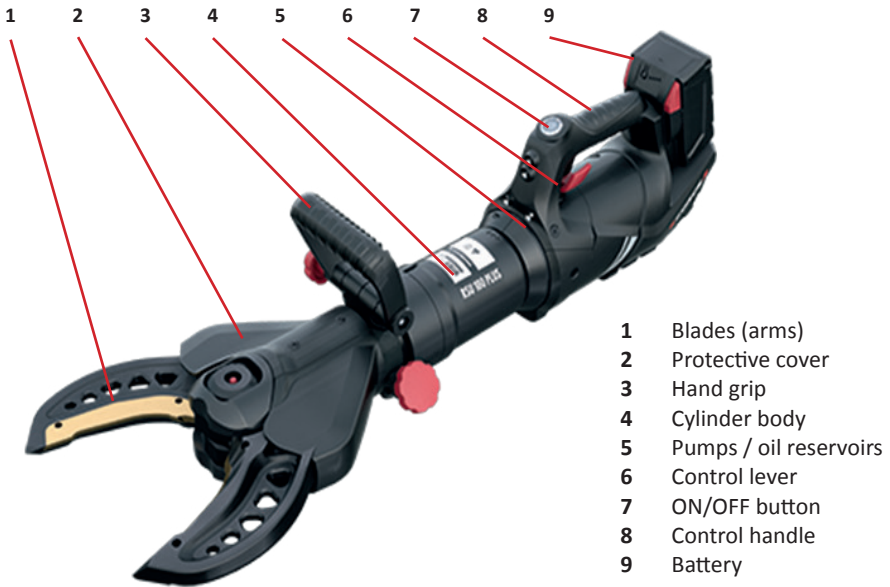

Brief description of cutter


Battery-powered cutters are specially designed rescue equipment for cutting vehicle body parts. They are used to rescue trapped or enclosed accident victims. The cutter's uses include cutting door and roof beams, columns and sills.

Because the devices are equipped with internal electrohydraulic drive, they are not linked to a power unit and can therefore be used in hard-to-reach locations.

The movement speed of the cutter blades is affected by moving the control lever on the control handle with greater or lesser force. The maximum cutting force is achieved only when the lever is on full activation.

Rescue cylinder

1 2 3 4 5 6 7

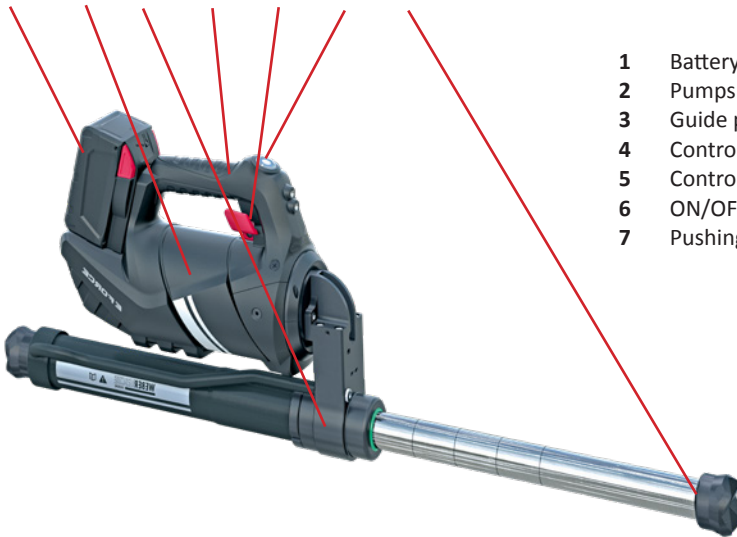

- 1 Battery
- 2 Pumps / oil reservoirs
- 3 Guide piece
- 4 Control handle
- 5 Control lever
- 6 ON/OFF button
- 7 Pushing head

Brief description of rescue cylinder


Battery-powered rescue cylinders are specially designed rescue devices for pushing away parts of a vehicle body. They are used to rescue trapped or enclosed accident victims. The rescue cylinder is suitable for tasks such as pushing up steering columns, vehicle roofs and other obstacles.

Because the devices are equipped with internal electrohydraulic drive, they are not linked to a power unit and can therefore be used in hard-to-reach locations.

The rescue cylinders are a supplement to the spreader and can be used, for example, if the spreading arm's spreading distance is no longer adequate.

The movement speed of the piston is affected by moving the control lever on the control handle with greater or lesser force. The maximum compressive force is achieved only when the lever is on full activation.

Spreader

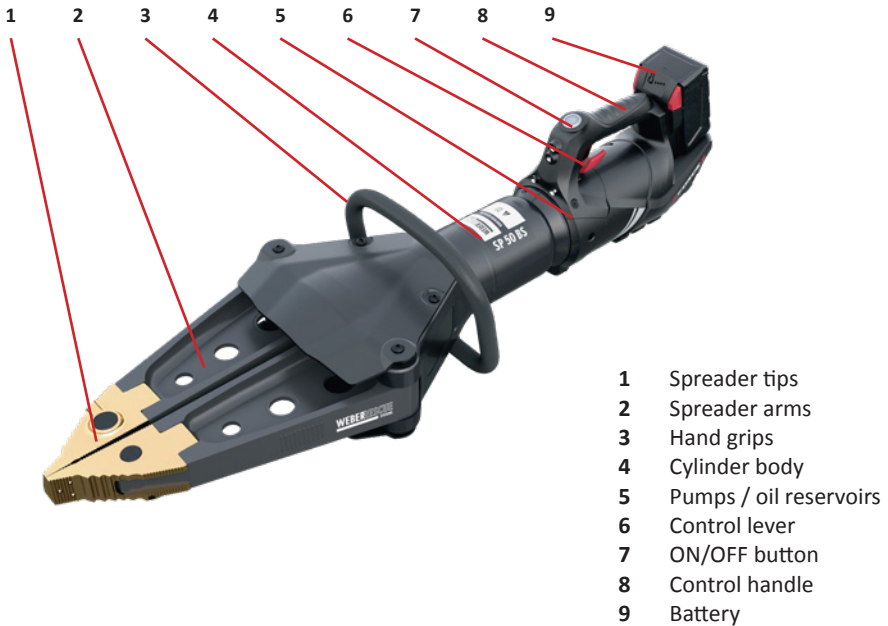

Brief description of spreader

Battery-powered spreaders are specially designed rescue devices for spreading, pressing and pulling. They are used to rescue trapped or enclosed accident victims. The spreaders are mainly suitable for opening doors, and for lifting vehicles and other movable loads.

Because the devices are equipped with internal electrohydraulic drive, they are not linked to a power unit and can therefore be used in hard-to-reach locations.

The movement speed of the spreading arms is affected by moving the control lever on the control handle with greater or lesser force. The maximum spreading force is achieved only when the lever is on full activation.

4.2 Hydraulic supply

Drive

The battery tools are powered by a 28 V DC motor. When the tool is switched on, the motor idles. Only when the control lever is operated the motor start to run at a higher speed.

Pump

The hydraulic pressure is generated by a high-pressure hydraulic pump (in the pumping unit). The pump is an swash plate axial piston pump with 3-4 pistons. The pressure operates directly on the working cylinder, making connection lines unnecessary.

Oil tank

The volume of oil for operation is taken from an accumulator. This means the entire hydraulic system is completely closed and void of air. Any possible volume expansion due to heat is balanced by the accumulator.

Hydraulic oil

All battery-powered devices should use a special hydraulic oil for rescue equipment in accordance with WN4841751. Normally the oil does not have to be changed, but we recommend changing it after 10 years. It can be changed only by service engineers at WEBER RESCUE Systems.



CAUTION!

Do not attempt to carry out repairs on the hydraulic system!

The complete hydraulic system is designed as a closed circuit and must therefore be completely free of air. For this reason, do not attempt to carry out repairs on the drive, to ensure that no air can enter the system!

4.3 Electrical supply, using a combi device as an example

Inserting the battery

Connect battery (1) to the rescue equipment (2). Slide the battery along the rails (3) provided for this purpose, until the battery clicks in. To release, press the push buttons (4). Then pull the battery up and out.



4.4 Operating E-FORCE devices

To start the battery tool, press the on/off switch. The switch is illuminated white, the LEDs start to light up, and the motor idles. In this state, if the tool is not operated using the control lever on the control handle, it switches off automatically after 30 seconds and must then be restarted.

The movement speed can be precisely controlled by pressing with greater or lesser force on the control lever. The maximum cutting, spreading or compressive force is reached only if the lever is pushed completely through.

Closing the cutter / Opening the spreaders / Extending the rescue ram

The tools' main direction of movement is triggered by pressing the rocker switch to the left with your index finger (grooved side of the rocker switch).

Opening the cutter / Closing the spreaders / Retracting the rescue ram

The opposite direction is triggered by pressing the control rocker to the right with your thumb (curved side of the rocker switch).

Dead man's switch

When the rocker switch is released, it returns to the zero position automatically. This always brings the tool to a stop in any situation, including under load. After 30 seconds, the tool switches off.



E-FORCE control unit



Example of the cutter:
left to close, right to open

4.5 Accessories

Combi devices



Shear blades



Pulling device



Chain set



RZM 740



Transport bag

| ID-Nr. | SPS 270 MK2 E-FORCE3 | SPS 360 MK2 E-FORCE3 | SPS 370 MK2 E-FORCE3 | RIT-TOOL E-FORCE3 |
|----------------|-------------------------|-------------------------|-------------------------|----------------------|
| Shear blades | 1084095 | 1068993 | 1063315 | 1084096 |
| Tips | - | - | 3867323 | |
| Pulling device | 2096617 | 2835746 | 2836033 | |
| Chain set | 571407 | 2819139 | | |
| RZM 740 | 1056478 | | - | |
| Transport bag | 1058128 | | | |

Cutters



Blade without insert



Blade insert



Blade complete




Blade inserts in pouch



Shear blade for
RSX 160 / RSX 185

| ID-Nr. | RSU 180 PLUS E-FORCE3 | RSU 210 PLUS E-FORCE3 |
|-------------------------|-----------------------|-----------------------|
| Blade without insert | 1084723 | 1087420 |
| Blade insert | 1084724 | 1084724 |
| Blade complete | 1081085 | 1087581 |
| Blade inserts in pouch | 1084725 | 1084725 |
| Shear blade for RSX 160 | 1050557 | |
| Shear blade for RSX 185 | 1823035 | |

Spreader

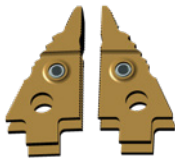

Spreader tips



Chain set

| ID-Nr. | SP 40 C / SP 44 AS | SP 54 AS / SP 50 BS |
|---------------|--------------------|---------------------|
| Spreader tips | 1091176 | 1091849 |
| Chain set | 2819139 | 571415 |

Rescue cylinder



Extension

| ID-Nr. | RZ 1-910 E-FORCE2 |
|------------------|-------------------|
| Extension 175 mm | 1058482 |
| Extension 250 mm | 3838579 |

Accessories E-FORCE devices

| | ID-Nr. |
|--|---------|
| Replacement battery 5.0 Ah | 1072893 |
| Battery case | 1056921 |
| Strap for battery case | 1056920 |
| Plug-in charger 230V | 1054097 |
| Plug-in charger 110V | 1054099 |
| Onboard charger | 1060423 |
| Permanet power supply / power adaptor 230V | 1060422 |
| Permanet power supply / power adaptor 110V | 1060426 |

4.6 Replacing blade inserts (PLUS)

During blade replacement, the cutter is fixed in place. Any slipping should be avoided. Replacing the blade requires a soft-face hammer, the roll pins supplied, a punch and the blade inserts themselves. It makes sense to replace both blade inserts so that the cutting behaviour is not impaired.



NOTE!

The blade inserts should not be reground, simply cleaning off any soil is recommended.

Procedure:



Fig. 1

The cutter is positioned with the type plate pointing upward and is fixed in place. A clamping device, as shown in the illustrations, is not obligatory. When the blade insert is being changed, the battery must be removed from the cutter and not under load. This means that the shear is not completely open or closed. The blade insert for the cutter blade with the smooth surface can now be replaced. The roll pins are knocked out and downward from the punch (see figure 1).



Fig. 2

After the roll pins have been knocked out of their position, the blade insert can be pulled out. The use of a forked screwdriver is recommended. If the blade insert cannot be loosened immediately, it can be gently levered out using a punch in the holes (see figure 2).



Fig. 3

Next, the cutter is rotated and the blade insert is placed in the cutter blade with no insert. When inserting, make sure that the blade insert does not twist. If the blade inserts cannot be inserted by hand, use the soft-head hammer (see figure 3).




Fig. 4

The roll pins are located using a punch and light blows of a hammer from above into the position holes provided for this purpose. Roll pins should be pushed into position until they are flush with the top surface of the blade (see figure 4).

4.7 Changing the spreader tips

The spreader tips are secured in the spreader arms with removable collar studs. In order to change, press out the studs secured by a spring-loaded ball. After changing the tips, push the collar studs back in again. When doing this ensure that the studs are correctly fitted (completely pressed in).

Fitting the bracket for the chain set is identical. The chain lock must be fitted with the lock facing upwards.

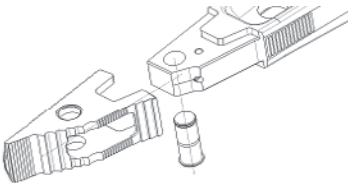

The collar studs on the spreader tips can be pressed out of the spreader arms but have a safety system to prevent them being lost and so they cannot be separated from the tips.

The SP 40 C and SP 44 AS spreader tips are not secured with removable collar studs but rather with a tensioning pin that must be knocked out when the tips are being changed. The chain set can be fastened in a separate hole without having to remove the tips beforehand.



WATCH OUT!

Always insert door opener tips 1096859 (optional) with all full length!

If the optionally available door opener tips are used on the combi tools, these must always be inserted with the full length into the gap. In addition, reposition as often as possible in order to insert the teeth into the gap as far as possible (at least 20 mm). Otherwise, the tips may break when the combi tool is fully loaded.

5 Possible applications

5.1 Safety information



WARNING!

Never reach between the cutter blades or the spreader arms!



WARNING!

During any work with battery-powered devices, voltage-carrying parts can break or fly off, thereby endangering people.

Uninvolved parties must therefore remain a safe distance away or stay in the danger zone only as long as necessary.

5.2 Cutting (Cutters, combi devices)

The devices' cutting capabilities can only be used optimally if they are placed as near as possible to the blades' pivot point (Figure 1). This means it may be necessary to readjust the device.

The device only achieves full cutting performance when the rocker lever is pressed all the way through. In addition, it can take several seconds for the unit to reach full operating pressure.

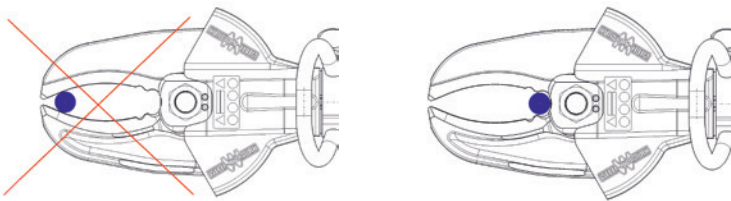


Fig. 1

To prevent the blades from being damaged, they must always be placed at right angles to the material to be cut. Also, the tips of the blades must not be more than 5mm apart during the cutting process. If this value is exceeded, the cutting process must be stopped and then started again.

**CAUTION!**

Do not sever any parts with loose ends, because this can result in personal injury due to parts flying off.

**ATTENTION!**

When cutting high-strength vehicle body parts, such as shock absorbers, hinges or steering columns, the shear blades (arms) may cause severe damage.

5.3 Lifting / pressing (rescue cylinder)

In its closed state, the rescue cylinder is positioned for lifting or pushing away vehicle body parts. Therefore, make sure that the cylinder is placed as centrally as possible and at a right angle to the load.

For better positioning, the pushing head can be turned on the piston rod.

Suspended parts must immediately be suitably braced and supported. It is forbidden to stay under suspended loads.


**NOTE!**

Before the rescue cylinder is used, the attachment point must be supported so that force develops in the desired direction.

5.4 Spreading (Spreaders, combi devices)

The spreading function's uses include opening doors, lifting vehicles and other movable loads, pushing vehicle parts away, and squashing tubes and beams. For this, the vehicle must be stably stabilized and supported.

To prevent any sliding during spreading, the arms and tips are fluted inside and out. Whenever possible, the tips should be used only to enlarge a gap, because repositioning the spreader prevents slipping.

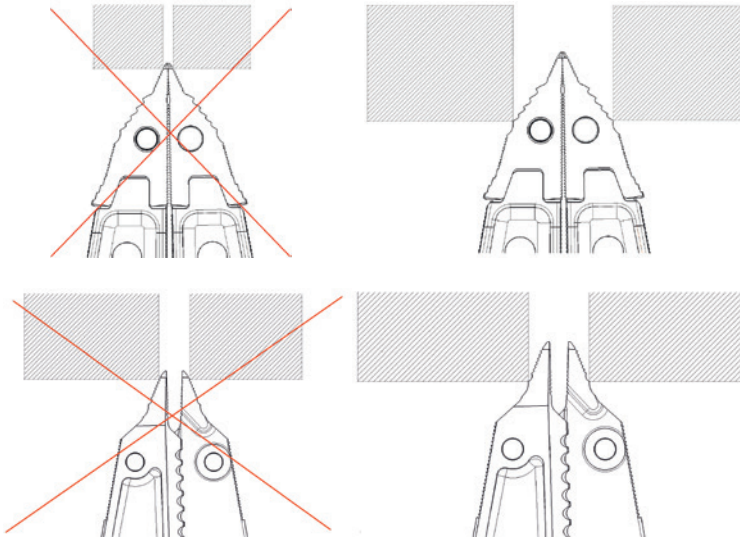

5.5 Pulling (spreaders, Combi devices)

After the chain set (as explained in chapter 4.7) has been mounted on the spreader tips, the combi device can also be used for pulling.

For this, the chains must be tightly tensioned and must be tensed only in the pulling direction. To tension the chain, only one lock can be pressed in, so that the chain can be pulled through the holder.

If the range of movement is not sufficient, tension chains or other means must be used so that the spreader can be reopened and the chain retensioned.



ATTENTION!

Store the pulling chains with locks mounted about 10–20 cm from the end. Check the chains prior to every use. Check that the weight does not stress the tip of the hook, but lies in the middle of the hook instead.


- » Do not make any repairs on your own.
- » Do not stress the chains beyond the permitted load carrying capacity.
- » Do not load with a jerking movement.
- » Do not galvanize or paint the chains.
- » Do not shorten the chain by knotting it.
- » Do not subject the chains to heat stress.
- » Use the chains and accessories only between -40°C and $+200^{\circ}\text{C}$.
- » During all maintenance work, observe the applicable German accident prevention regulations (UVV) as well as the specifications of DIN EN 818-7 and DIN 685-5.
- » Chains must only be used for lashing. Lifting loads is not permitted.

Chains must not be used if:

- » Deformations, cracks, signs of corrosion are present.
- » The wire diameter of the chain link has decreased by 10% of the nominal thickness.
- » An individual chain link has been permanently stretched.
- » An individual link has been enlarged by more than 2%.
- » The internal chain pitch over a measuring distance of 11 chain links has increased by more than 2%.

5.6 Crushing (Spreaders, combi devices)

Pipes and other hollow profiles are crushed by closing the spreader arms. With combi devices, however, crushing is only to be performed in the tip area.

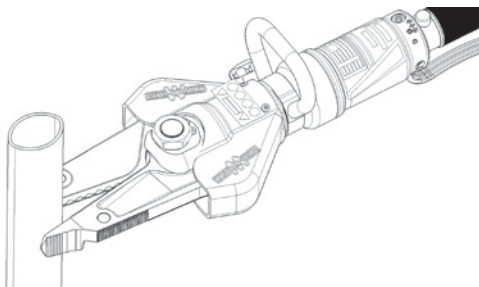

ATTENTION!

Material to be crushed can suddenly jump away.
Do not remain in the work area of the spreading and combi devices!

5.7 Lifting (spreaders, combi devices)

The combi device can also be used for lifting vehicles or other movable loads. Care must be taken to secure the load against slipping away and to position the spreader tips far enough apart under the load to prevent slipping.

The load being lifted must be constantly monitored (tipping, rolling away or changing position). Also, the lifted load must immediately be propped up and supported in a suitable way.

5.8 Peeling (spreaders, combi devices)

To create entry openings after bus and train accidents, in silos, etc., both the spreader tips and the peeling tool can be used.

6 Battery and charger

6.1 Charger technical data

| technical data | Charger MCLi |
|----------------------------------|--------------|
| Voltage range | 28 V |
| Charging current, quick charging | 3.5 A |
| Charging time | ca. 1 h |
| Weight w/o power cable | 700 g |



| Inputvoltage | ID-No. |
|------------------------------|---------|
| 220/240V AC 50/60Hz (Europe) | 1054097 |
| 240V AC (Australia) | 1054098 |
| 110V AC (USA) | 1054099 |

6.2 Special safety instructions



WARNING!

Do not throw used rechargeable batteries into a fire or into household waste. Your dealer can dispose of batteries in an environmentally sound manner.

The following batteries can be charged with the charger:

| Voltage | Battery type | Nominal capacity | Number of cells |
|---------|--------------|------------------|-----------------|
| 28 V | M 28 BX | ≥ 3.0 Ah | 2 x 7 |
| 28 V | Li 28 V | ≥ 3.0 Ah | 2 x 7 |
| 28 V | Li-Ion 71NR | ≥ 5.0 Ah | 2 x 7 |

**WARNING!****Important safety information concerning the battery and charger.**

- » Do not use the charger to charge non-rechargeable batteries.
- » Do not store batteries together with metal objects (danger of short circuit).
- » Do not allow metal parts to enter the charger's battery insertion slot (danger of short circuit).
- » Do not open batteries and chargers, and store only in dry rooms. Protect from moisture.
- » The charger carries voltage from the power grid. Do not reach into the device with conductive objects.
- » Do not load a damaged battery — replace it immediately instead.
- » Before every use, check the device, connection cable, battery pack, extension cable and plug for damage and ageing. Allow only qualified personnel to repair damaged parts.
- » This device is not designed for use by persons (including children) with limited physical, sensory or mental abilities, or lacking experience, and/or lacking expertise, unless they are supervised by a person responsible for their safety or have received instructions from this person on how to use the device. Children should be supervised to ensure that they do not play with the device.

6.3 Intended use

This charger charges the 28V Li-ion battery of the M 8/V28 system delivered with the battery-powered device. This device must be used only as specified and intended.

6.4 Power line connection

Only connect to single-phase AC current and only to the line voltage specified on the type plate. Connection to power sockets without an earthing contact is possible, because this is a protection class II design.

6.5 Li-ion battery

For safety reasons (air transport regulations), the batteries are delivered uncharged. Before first use, the battery must be completely charged.

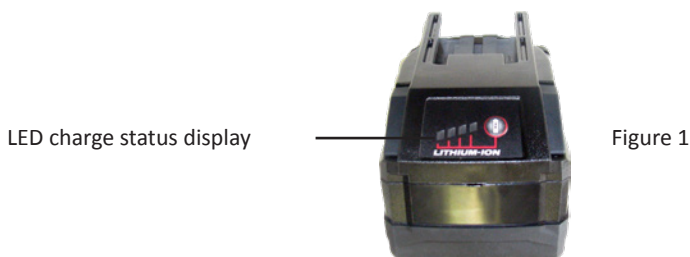


Figure 1

If the battery is not used for a prolonged period of time, the battery switches to standby mode. To use again, the battery must be reactivated (recharged).

The charge status can be called up by pressing the button on the battery (see Fig 1). To do this, the battery can remain in the battery-powered device, but it must be switched off at least 1 minute beforehand (otherwise the display will not be accurate). The number of glowing LEDs indicates the charge status.

The basic principle is: If the battery-powered device does not function after the battery is inserted, put the battery onto the charger for testing. The displays on the battery and charger give information about the battery charge status.

At low temperatures, the work can be still be carried out with lower performance. For best operational readiness, the batteries must be fully charged after use.

6.6 Charging process

After inserting the battery into the charger's insertion slot, the battery is charged automatically (red LED glows continuously).



If too warm or cold a battery is inserted into the charger (red LED flashes), the charging process starts automatically as soon as the battery has reached the correct charging temperature (0°C to 65°C). The maximum charging current flows if the temperature of the Li-ion battery is between 0°C and 65°C.



The charging time is between 1 min. and 60 min., depending on how much the battery has drained (at 3.0 Ah). The charge time for the 5.0 Ah rechargeable battery lies between 1 min and 90 min. If the battery is fully charged, the LED on the charger switches from red to green.



The battery does not need to be removed from the charger after charging. The battery can continue to stay in the charger. This cannot overload the battery, and it keeps the battery ready to use.

If both LEDs flash alternately, the battery is either not correctly placed or a malfunction of either the battery or charger has occurred. For safety reasons, remove the charger and battery from service immediately and have it checked by an authorized customer service centre.



If the power adapter is overloaded, all LEDs flash 4 times. To be able to continue charging, unplug the power adapter and plug it back in.



6.7 Maintenance

If the power cable is damaged, it must be replaced by a customer service centre.

Use only approved accessories and replacement parts. Parts whose replacement has not been described must be replaced by an authorised customer service centre.

6.8 Charging cycles

| Information | Explanation |
|---|---|
| Charging cycles | approx. 1000 |
| Partial discharge | No effect, because the battery always retains its capacity until discharge. |
| Partial discharge and subsequent recharge | Each recharge counts as a full charging cycle. Therefore the battery should be used until completely drained. |
| Deep discharge protection | is provided |

7 Transport, packaging and storage

7.1 Safety information

**CAUTION!****Incorrect transport can cause damage!**

Improper transport can cause significant material damage.

Therefore:

- » Proceed with caution when unloading the packages, and observe the symbols on the packaging.
- » Do not fully open and remove the package until it has reached its actual storage location.

7.2 Transport inspection

Upon receipt, the delivery should be checked immediately for completeness and damage during transport so that a quick remedy can be performed, if necessary.

If there is visible external damage, please proceed as follows:

- Do not accept the delivery, or only accept it with reservation.
- Note the extent of the transport damage on the transport documents or on the transport company's delivery note.
- File a complaint.

**NOTE!**

Report any defect as soon as it is detected.

Claims for damages can be directed to our customer service department (see Chapter 1.6).

7.3 Symbols on the packaging



Caution, fragile!

Handle the package carefully — do not drop, throw, strike or tie up.



This way up!

The package must be transported and stored strictly so that the arrows point upward. Do not roll or tilt.

7.4 Disposal of packaging



All packaging materials and disassembled parts (transport protection) must be disposed of properly, in accordance with local regulations.

7.5 Storage

The equipment must be stored in a dry and dust-free environment, where possible. Avoid direct UV radiation to the hoses.



CAUTION!

The equipment must be stowed securely in the mountings provided in order to avoid damage during transit, etc.

8 Installation and commissioning

8.1 Safety information

**WARNING!****Danger of injury due to improper operation!**

Improper operation can cause serious injury or material damage.

Therefore, make absolutely sure to:

- » All operating steps are executed in keeping with the information in this operating manual.
- » All covers and protective devices are installed and in proper working order prior to starting work.

Personal protective equipment

Wear the protective equipment detailed in Chapter 2.4 for all work!

**NOTE!**

Special reference is made where it is necessary to wear additional protective equipment for certain work with or on the device.

8.2 Checking

Inspect the E-FORCE device for damage. If the cutting device is not in pristine condition, it must not be used! In this case, immediately contact your supplier.

E-FORCE combi devices, cutters and spreaders:

- Check the blades (for damage)
- Inspect the spreader tips (for damage)
- Check the control handle including the rocker lever (function)
- Check the handle (secure attachment)
- Check the protective cover (for damage)

E-FORCE rescue cylinder:

- Check the piston rod (for damage)
- Check the control handle including the rocker lever (function)
- Check the plungers (for damage)
- Check the guide piece (for damage)

8.3 Shut-down (end of work)

Cutters:

After work is over, the blade tips must be placed one above the other to prevent injury. The blades of the cutting device must not be completely closed, as otherwise tension will build up in the device.

Rescue cylinder:

After work is over, the cylinder's piston rod must be retracted (but not completely) so as to relieve the hydraulic load on the device.

Combi devices and spreaders:

After work is over, the spreading arms must remain slightly open, so as to relieve the hydraulic load on the device.

9 Service

9.1 Safety information

**WARNING!****Risk of injury due to improperly performed maintenance work!**

Improper maintenance of the equipment can cause serious injury or material damage.

Therefore, make absolutely sure to:

- » Only let qualified personnel carry out maintenance work.
- » Make sure the installation site is organised and clean! Loose components and tools lying around are sources of danger.
- » Wear protective gloves for all work!

9.2 Care and maintenance

In the interest of permanent operational readiness, the following measures are essential:

- Each time the device is subjected to a load, but at least once a year, the equipment and the accessories must be visually inspected. Special attention must be paid to spreader tips, joints, blades, hoses, and coupling halves.
- Every three years, or if there are doubts about the safety or reliability of the equipment, functional testing and stress testing must also be carried out (according to DGUV Grundsatz 305-002 or country-specific guidelines).
- After every loading, the lubrication of the movable parts and pins must be inspected and sprayed with Fin Grease OG.
- Every 10 years we recommend a complete change of the hydraulic oil by our factory service to maintain full performance.



ATTENTION!

Prior to all maintenance work, the equipment must be cleaned of any dirt so that it does not get into the hydraulic system.

The cleaning can be carried out using a conventional citrus cleaner.

9.3 Maintenance schedule

A precise maintenance plan with testing intervals, regulations and results can be found in the DGUV Grundsatz 305-002 Point 18 (hydraulically operated rescue equipment).



NOTE!

If there are any problems with the maintenance of the devices, our customer service is available (see Chapter 1.6).

10 Malfunctions

Combi devices and cutters:

| Malfunction | Possible cause | Remedy |
|---|--|---|
| Device does not reach full performance | Rocker levers not completely pressed to the side | Press the rocker lever completely to the side |
| Combi device moves in opposite direction under load | Check if valve is defective | Have the device checked by an authorized service centre. |
| Blades are loose and gape apart during cutting | Blade not attached to the cutter head as specified | Have repaired by an authorized workshop |
| Blade opening below target value | Cutter head settings altered | Have repaired by an authorized workshop |
| Combi device's opening width below target value | Cutter head settings altered | Have repaired by an authorized workshop |
| Pressure build-up despite movement (open – closed) without load | Hex nut / central bolt too tight | Have repaired by an authorized workshop |
| Blade chipping | Blades damaged e.g. from cutting high-strength materials | Regrindable to about 2 mm, see repair manual, otherwise replace |
| Cracks in the blades | Blades damaged e.g. from cutting high-strength materials | Have the blades replaced by an authorized service centre |
| Rescue equipment does not function | Battery is dead | Place the battery on the charger. The displays on the battery and charger give information about the battery charge status. |

Rescue cylinder:

| Malfunction | Possible cause | Remedy |
|---|--|--|
| Device does not reach full performance | Rocker levers not completely pressed to the side | Press the rocker lever completely to the side |
| Cylinder moves in opposite direction under load | Check if valve is defective | Have the device checked by an authorized service centre |
| Rescue equipment does not function | Battery is dead | Place the battery on the charger The displays on the battery and charger give information about the battery charge status |

Spreader:

| Malfunction | Possible cause | Remedy |
|---|--|--|
| Device does not reach full performance | Rocker levers not completely pressed to the side | Press the rocker lever completely to the side |
| Spreader moves in opposite direction under load | Check valve defective | Have the device checked by an authorized service centre |
| Rescue equipment does not function | Battery is dead | Place the battery on the charger. The displays on the battery and charger give information about the battery charge status |

11 Decommissioning/Recycling

After the end of the normal service life, the equipment must be professionally disposed of. Individual parts can, however, certainly be used again.

The hydraulic oil must be completely drained and collected. Make sure that the hydraulic oil is disposed of separately!

For disposal of all device components and packaging materials, the disposal conditions of the specific location apply.

Do not discard electric tools with household waste! According to European directive 2002/96/EC for used electric and electronic devices and its implementation in national regulations, used electric tools must be collected separately and recycled in an environmentally sound manner.

**NOTE!**

Please ask your supplier about disposing of the device.

12 EC Declaration of Conformity



WEBER-HYDRAULIK GMBH
Emil Weber Platz 1, A-4460 Losenstein, Austria

EC-DECLARATION OF CONFORMITY

according to Directive 2006/42/EC

Herewith we declare, that our "Hydraulic rescue Equipment"

| | |
|----------------------------|---|
| SPREADERS | SP 35 (AS) E-FORCE2, SP 40 C E-FORCE(2/3), SP 44 AS E-FORCE(2/3), SP 50 BS E-FORCE3, SP 54 AS E-FORCE3, SP 53 BS E-FORCE2, SP 64 BS E-FORCE3, SP 84 BS E-FORCE3 |
| CUTTERS/COMBI-TOOLS | RSX 160-50 E-FORCE(2/3), RSX 165-65 E-FORCE(2/3), RSU 180 (PLUS) E-FORCE(2/3), RSX 185 E-FORCE(2/3), RSU 210 (PLUS) E-FORCE(2/3), RIT- TOOL E-FORCE(2/3), SPS 270 (MK2) E-FORCE(2/3), SPS 360 (L) E-FORCE2, SPS 360 MK2 E-FORCE3, SPS 370 E-FORCE2, SPS 370 MK2 E-FORCE3, SPS 400 E-FORCE2, SPS 400 MK2 E-FORCE3 |
| RAMS | RZ 1-910 E-FORCE(2/3), RZ 1-1095 E-FORCE(2/3), RZT 2-1205 E-FORCE(2/3), RZT 2-1170 E-FORCE(2/3), RZT 2-1360 E-FORCE(2/3), RZT 2-1500 E-FORCE(2/3) |
| POWERSUPPLY | Battery 3,0 Ah, Battery 5,0 Ah, Battery charger |
| SPECIAL TOOLS | BC 250 E-FORCE2, SPK 250 E-FORCE2, DO 140 E-FORCE2, C 100 E-FORCE2, S 25-20 E-FORCE2 |
| ACCESSORIES | and accessories to all tools |

meets the relevant basic safety and health requirements of the Directive

EC-MACHINE DIRECTIVE 2006/42/EC

EC-ELECTROMAGNETIC COMPATIBILITY DIRECTIVE 2004/108/EC

For the relevant implementation of the safety and health requirements mentioned in the Directive, the following standards and or technical specifications has been respected:

DIN EN 13204
NFPA 1936

DIN EN ISO 12100
DIN 14751-4

DIN EN ISO 13857

The tools are tested according to EN 13204 and NFPA 1936 through TÜV-Süd.

Authorised person to compile the technical file(s):

Josef Eder - Head of Development

WEBER-HYDRAULIK GMBH
A-4460 Losenstein - Emil Weber Platz 1

Losenstein, 03.12.2019


i.V. Patrick Allinger
(Productmanager)


i. A. Josef Eder
(Head of Development)

13 Notes

WEBER-HYDRAULIK GmbH

Heilbronner Straße 30
74363 Güglingen / Germany
Telefon +49 (0) 7135/71-10270
Telefax +49 (0) 7135/71-10396
info@weber-rescue.com
www.weber-rescue.com

Emil Weber Platz 1
4460 Losenstein / Austria
Telefon +43 (0) 7255/6237-120
Telefax +43 (0) 7255/6237-12461
info@weber-rescue.com
www.weber-rescue.com

WEBERRESCUE
SYSTEMS

www.weber-rescue.com